



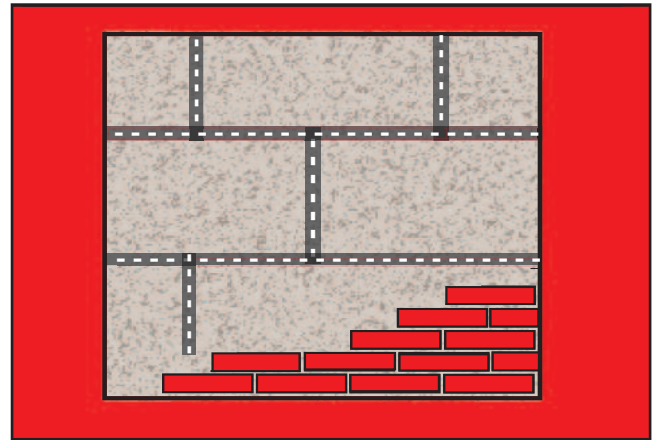

ROOF DECK SEAM TAPE

- **SLIP RESISTANT**
- **SELF-ADHESIVE**

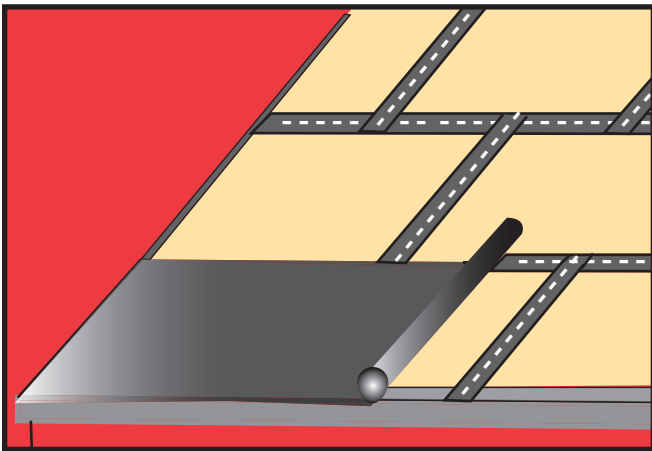

FOR ROOFING AND EXTERIOR WALLS
Forms a Moisture and Vapor Barrier
Self-Sealing Around Screws and Nails
Seals Sheathing Seams
Meets ASTM 1970
Easy To Use, Just Remove
Release Paper and Press in Place



RDS467 4" x 66.7'



COFAIR PRODUCTS, INC.

7301 N. ST. LOUIS AVENUE, Skokie, IL 60076 • Ph: 800-333-6700 • www.cofair.com



ROOF DECK SEAM TAPE

DESCRIPTION

Cofair's **Roof Deck Seam Tape** is a self-adhering waterproofing tape composed of a non-slip surfaced film laminated to rubberized asphalt adhesive. The adhesive is protected by a release paper.

INTENDED USE

Roof Deck Seam Tape is used to tape all seams of a plywood or OSB roof deck, preventing water from entering the structure. Once the seams are taped, the roof may be covered with roofing felt, synthetic or self-adhering underlayment. Should the main roof be damaged, **Roof Deck Seam Tape** will prevent water from entering the structure between the deck seams.

The aggressive *Broad Temperature Spectrum adhesive* used in **Roof Deck Seam Tape** self-seals around fasteners such as nails, screws and staples. Additionally, it readily sticks to plywood, OSB, rigid foam insulation, metal and other common roof deck materials.

Roof Deck Seam Tape may also be used to prepare a substrate for a self-adhered membrane by taping larger than desired joints and seams.

Recommended Application Range	35°F-110°F
Size	4" x 66.7'
Thickness	40MIL

MEETS ASTM 1970

INSTALLATION

- Roof deck must be clean and dry.
- Apply in dry weather at recommended temperatures
- Start at the bottom and work up the roof so that the seams are overlapped like shingles.
- Peel back about 6" of the release paper, center over seam, adhere tape to roof deck and align.
- Continue to peel back the release paper as the tape is unrolled and press tape into place over roof seam.
- Allow 4" - 6" overlaps between pieces of tape, if possible. Laps must be made in a "shingle-like" manner so that water flows over the lap, not against it.
- Apply uniform pressure with a hand roller to the entire surface of the tape, especially at the seams and overlaps.

Cover with roofing or felt within 60 days.

CAUTION

- Concrete, masonry, DensDeck®, Fiberock® or similar must be fully cured and primed with an asphalt-based primer for satisfactory adhesion.
- Do not apply over uncured solvents, sealants or silicone caulking. It is the installer's responsibility to ensure that all sealants are compatible with asphalt.



COFAIR PRODUCTS, INC.

7301 N. ST. LOUIS AVENUE, Skokie, IL 60076 • Ph: 800-333-6700 • www.cofair.com